

Commercial Bathroom Faucets



USF-00BSS00

INSTALLATION INSTRUCTIONS





Notes before installation:

- 1. Please check that all components are present.
- 2. Before installation ensure that all feed lines are clear of debris and on/off valve is present.
- 3. Ensure water pressure is between 20-125 PSI (Includes combination of hot and cold feed lines).
- 4. Pictures in the manual are general in content and may not represent exactly your purchased faucet. If you are having difficulties please contact a professional plumber.
- 5. If you will be away from home for an extended period you should shut off the main water supply.

ools you will need:




1. Adjustable Wrench




Philips Screwdriver
Hexagon Wrench



4. Pipe Tape

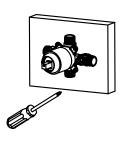


1. Confirm the installed place of the pressure balance valve and fix to the wood block.

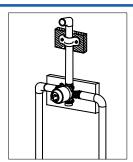


2. Connect the hot & cold inlet tube and outlet tube, then make sure the tube fits stable on the wooden wall.




3. Lock and install protective cover into the body. (Ø140mm round type).




4. Please cut the size of the tile hole according to the size and shape of the protective cover (about 5mm bigger than the protective cover from each side). And please put the tile outside the wooden wall (please note that we keep the same central point for the tile hole with the protective cover)

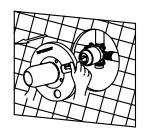


5. Loosen the screw and remove protective cover.

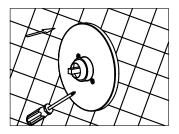

6. Lock the deck plate into the body and cling to the wall, then tighten the screw.

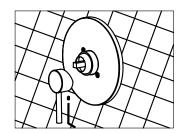

7. Put on the handle, then tighten the screw.

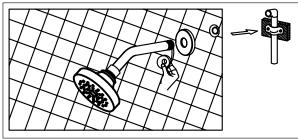

8. Install the shower arm, shower head and flange to the fitting. (stick to the wall) . Tighten the showerhead to the shower arm with the pipe tape. (Make sure to wrap the pipe tape in a clockwise direction).