



# USF-00BTS69


## INSTALLATION INSTRUCTIONS




### Notes before installation:

1. Please check that all components are present.
2. Before installation ensure that all feed lines are clear of debris and on/off valve is present.
3. Ensure water pressure is between 20-125 PSI (Includes combination of hot and cold feed lines).
4. Pictures in the manual are general in content and may not represent exactly your purchased faucet. If you are having difficulties please contact a professional plumber.
5. If you will be away from home for an extended period you should shut off the main water supply.


### Tools you will need:




1. Adjustable Wrench
2. Philips Screwdriver
3. Hexagon Wrench
4. Pipe Tape

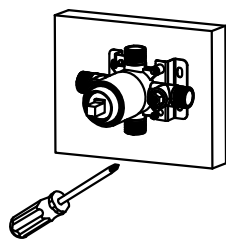


1. Confirm the installed place of the pressure balanced valve and fit on the wood block.

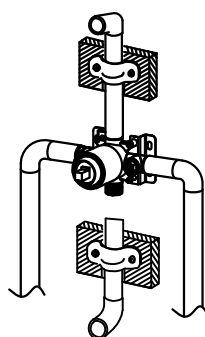


2. Connect the hot & cold inlet tube and outlet tube, then make sure the tube fits stable on the wooden wall.

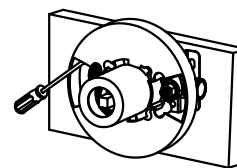


3. Lock the install protective cover into the body. (Ø140mm round type).

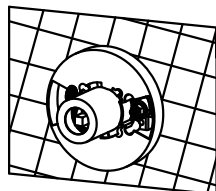


4. Please cut the size of the tile hole according to the size and shape of the protective cover (about 5mm bigger than the protective cover from each side). And please put the tile outside the wooden wall (please note that we keep the same central point for the tile hole with the protective cover).

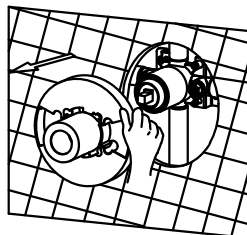


5. Loosen the screw and remove protective cover.

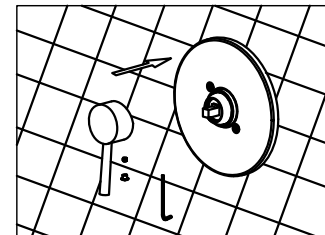


6. Lock the deck plate into the body and fasten it to the wall, then tighten the screw. Put the handle on, then tighten the screw.

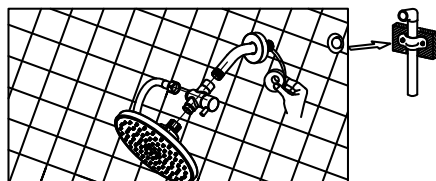

7. Install the shower arm, shower head and flange to the fitting. (stick to the wall). Tighten the showerhead to the shower arm with the pipe tape. (Make sure the pipe tape with clockwise direction). the installed place of the pressure balance valve and fixed on the wood block.

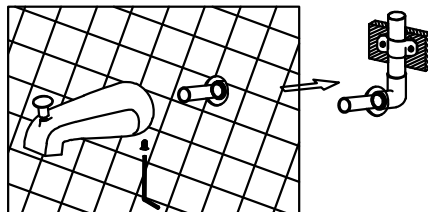

8. Wrap the thread of spout with teflon tape (ensure it wraps clockwise). Screw-in to the inlet pipe inside the wall, then install the decorative cover onto the wall.

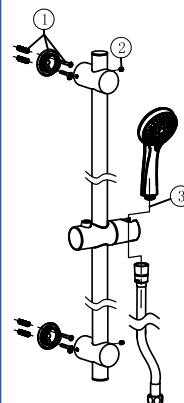

9. (1). Use tapping screw to fix holder on the wall  
(2). Fasten the hex screw.  
(3). Connect the hose with hand shower, and the other outside insert connector to the pipe which outside the wall