



Surround Installation Guide


Notes before installation:

- Verify that floor is structurally sound and level, floor must be able to support the full load of the installed items.
- Provide access to all plumbing connections.
- Observe all local building and plumbing codes.


Notice: The three sides wall must be strictly attached to the frame. There should be no empty gap between the walls and the frames. Please put wooden boards to fill the gap if there is.

Cleaning: Use a damp cloth only. Avoid using metal or abrasive polishes.


Tools you will need:

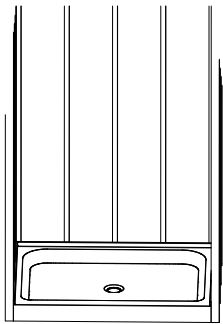


1. To ensure proper installation, wall must be plumb. Use a long level to recheck studs and add shims at top or bottom if needed, to achieve plumb.

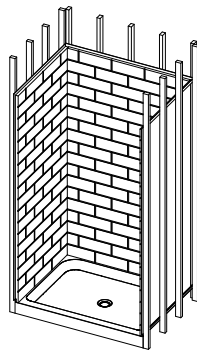


2. Preinstallation of shower walls. Set the back wall in place, then set the left wall in place and make it tight connection with the back wall; repeat the process with the right wall. With walls in place and mark each stud along the top of walls.

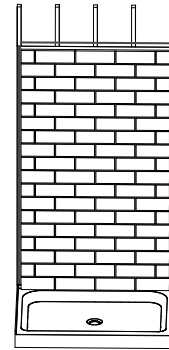


3. Take off all walls; below marks, apply enough adhesive along the length of each stud. Set the back wall in place, make all seam flush and tight, press firmly the wall to assure a firm bond with the adhesive; then screw the flanges.

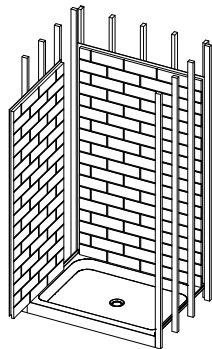

4. Set the left wall in place, make it tight connection with the back wall; same as the back wall, press to make good bond and screw the flanges

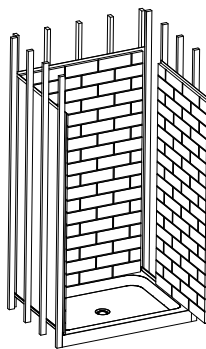

5. Same as the steps above

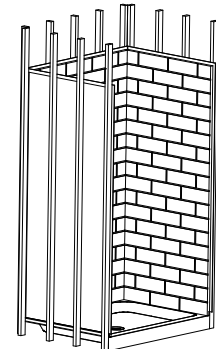

6. Apply silicone caulk in all joints.